

Features

- Compliant with Fiber Channel 100-M5-SN-I and 100-M6-SN-I standard
- Compliant with IEEE802.3z Gigabit Ethernet standard
- Industry standard small form pluggable (SFP) package
- Duplex LC connector
- Differential LVPECL inputs and outputs
- Single power supply 3.3V
- TTL signal detect indicator
- Hot Pluggable
- Class 1 laser product complies with EN 60825-1

Application

- Distributed multi-processing
- Switch to switch interface
- High speed I/O for file server
- Bus extension application
- Channel extender, data storage

Ordering Information

PART NUMBER	INPUT/OUTPUT	MONITOR	VOLTAGE	TEMPERATURE
CL-SFP SX 550	AC/AC	Х	3.3V	0° C to 70° C
CL-SFP SX 550DD	AC/AC	Yes	3.3V	0° C to 70° C
CL-SFP SX 550I	AC/AC	Х	3.3V	-20° C to -85° C

Page 1 of 9 Version 1.0 Date: 11/30/2005 *Carelink Technology Co., Ltd* 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019





Absolute Maximum Ratings

PARAMETER	SYMBOL	MIN	МАХ	UNITS	NOTE
Storage Temperature	T_S	-40	85	°C	
Supply Voltage	Vcc	-0.5	4.0	V	
Input Voltage	V_{IN}	-0.5	Vcc	V	
Output Current	I_o		50	mA	
Operating Current	I _{OP}		400	mA	

Recommended Operating Conditions

PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTE
Case Orangting Termonoture	Т	0	70	°C	CL-SFP SX 550
Case Operating Temperature	T_C	-20	85	°C	CL-SFP SX 550I
Supply Voltage	Vcc	3.1	85	V	
Supply Current	$I_{TX} + I_{RX}$		250	mA	

Transmitter Electro-optical Characteristics

Vcc = 3.1 V to 3.5 V, $T_{\rm C} = 0$ °C to 70 °C (-20 °C to 85 °C)

PARAMETER	SYMBOL	MIN	TYP.	MAX	UNITS	NOTE
Output Optical Power (50/125μm fiber, NA=0.20) (62.5/125μm fiber, NA=0.275)	Pout	-9.5		-4	dBm	
Extinction Ratio	ER	9			dB	
Coupled Power Ratio	CPR	9			dB	
Center Wavelength	λ_C	830	850	860	nm	
Spectral Width (RMS)	$\Delta\lambda$			0.85	nm	
Rise/Fall Time, (20–80%)	$T_{r,f}$			260	ps	
Relative Intensity Noise	RIN			-117	dB/Hz	
Total Jitter	TJ			227	ps	
Output Eye	Compliant with IEEE802.3z					
Max. Pout TX-DISABLE Asserted	P_{OFF}			-45	dBm	
Differential Input Voltage	V_{DIFF}	0.4		2.0	V	

Page 2 of 9 Version 1.0 Date: 11/30/2005

Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019



Receiver Electro-optical Characteristics


Vcc = 3.1 V to 3.5 V, $T_A = 0$ °C to 70 °C (-20 °C to 85 °C)

PARAMETER	SYMBOL	MIN	TYP.	MAX	UNITS	NOTE
Optical Input Power-maximum	P_{IN}	0			dBm	$BER < 10^{-12}$
Optical Input Power-minimum (Sensitivity)	P _{IN}			-18	dBm	$BER < 10^{-12}$
Operating Center Wavelength	λ_C	770		860	nm	
Optical Return Loss	ORL	12			dB	
Loss of Signal-Asserted	P_A			-18	dBm	
Loss of Signal-Deasserted	P_D	-35			dBm	
Differential Output Voltage	V_{DIFF}	0.5		1.2	V	
Data Output Rise, Fall Time (20–80%)	$T_{r,f}$			0.35	ns	
Receiver Loss of Signal Output Voltage-Low	RX_LOS_L	0		0.5	V	
Receiver Loss of Signal Output Voltage-High	RX_LOS_H	2.4		V_{CC}	V	

Page 3 of 9 Version 1.0 Date: 11/30/2005 *Carelink Technology Co., Ltd* 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019



Block Diagram of Transceiver

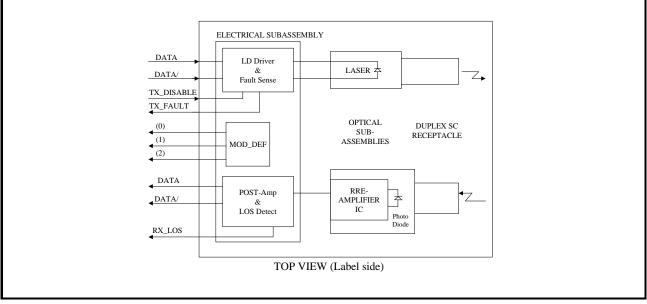

Transmitter Section

The transmitter section consists of a 850 nm VCSEL in an eye safe optical subassembly (OSA) which mates to the fiber cable. The laser OSA is driven by a LD driver IC which converts differential input LVPECL logic signals into an analog laser driving current.

TX_DISABLE

The TX_DISABLE signal is high (TTL logic "1") to turn off the laser output. The laser will turn on when

TX_DISABLE is low (TTL logic "0").

Receiver Section

The receiver utilizes a MSM detector integrated with a trans-impedance preamplifier in an OSA. This OSA is

connected to a circuit providing post-amplification quantization, and optical signal detection.


Receive Loss (RX_LOS)

The RX_LOS is high (logic "1") when there is no incoming light from the companion transceiver. This signal is normally used by the system for the diagnostic purpose. The signal is operated in TTL level.

Page 4 of 9 Version 1.0 Date: 11/30/2005 Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019




Dimensions

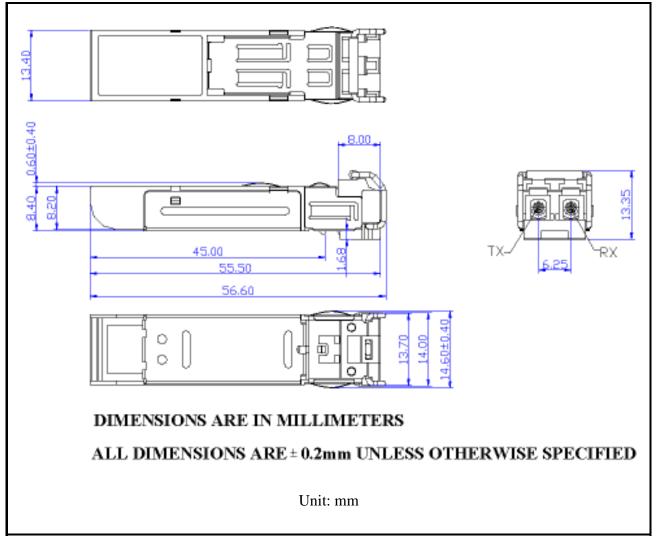

Page 5 of 9 Version 1.0 Date: 11/30/2005 **Carelink Technology Co., Ltd** 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019




SFP host board mechanical layout

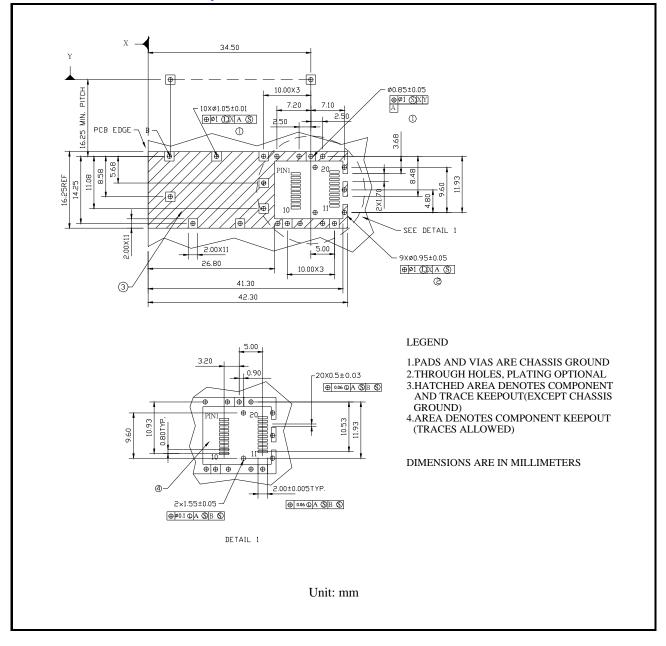

Page 6 of 9 Version 1.0 Date: 11/30/2005 *Carelink Technology Co., Ltd* 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019



Assembly drawing

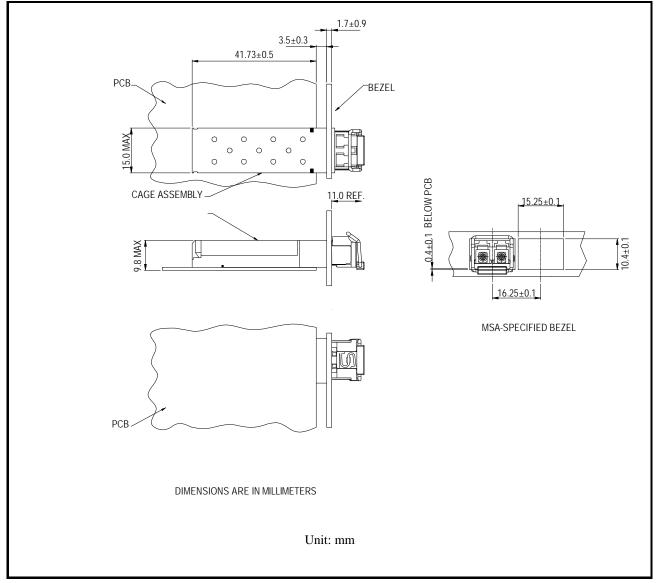


Page 7 of 9 Version 1.0 Date: 11/30/2005 *Carelink Technology Co., Ltd* 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019



Pin Assignment

Pin-Out

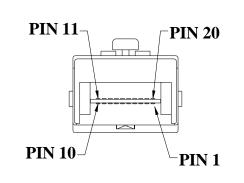

Pin	Signal Name	Description
1	T_{GND}	Transmit Ground
2	TX_FAULT	Transmit Fault
3	TX_DISABLE	Transmit Disable
4	$MOD_DEF(2)$	SDA Serial Data Signal
5	MOD_DEF(1)	SCL Serial Clock Signal
6	$MOD_DEF(0)$	TTL Low
7	RATE SELECT	Open Circuit
8	RX_LOS	Receiver Loss of Signal, TTL High, open collector
9	R_{GND}	Receiver Ground
10	R _{GND}	Receiver Ground
11	<i>R_{GND}</i>	Receiver Ground
12	RX-	Receive Data Bar, Differential PECL, ac coupled
13	RX+	Receive Data, Differential PECL, ac coupled
14	R _{GND}	Receiver Ground
15	V _{CCR}	Receiver Power Supply
16	V _{CCT}	Transmitter Power Supply
17	T_{GND}	Transmitter Ground
18	TX+	Transmit Data, Differential PCEL, ac coupled
19	TX-	Transmit Data Bar, Differential PCEL, ac coupled
20	T_{GND}	Transmitter Ground

Page 8 of 9 Version 1.0 Date: 11/30/2005 Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019



Eye Safety Mark

The SFP series multimode transceiver is a class 1 laser product. It complies with EN 60825-1 and FDA 21 CFR 1040.10 and 1040.11. In order to meet laser safety requirements the	Required Mark
transceiver shall be operated within the Absolute Maximum Ratings.	Class 1 Laser Product Complies with 21 CFR 1040.10 and 1040.11
<u>Caution</u> All adjustments have been done at the factory before the shipment of the devices. No maintenance and user serviceable part is required. Tampering with and modifying the performance of the device will result in voided product warranty.	

Note : All information contained in this document is subject to change without notice.

Page 9 of 9 Version 1.0 Date: 11/30/2005 **Carelink Technology Co., Ltd** 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019