



### **Features**

- Compliant with IEEE802.3z Gigabit Ethernet standard
- Compliant with Fiber Channel 100-SM-LL-L and standard
- Industry standard small form pluggable (SFP) package
- Duplex LC connector
- Differential PECL inputs and outputs
- Single power supply 3.3V
- TTL signal detect indicator
- Hot Pluggable
- Class 1 laser product complies with EN 60825-1

### **Application**

- Distributed multi-processing
- Switch to switch interface
- High speed I/O for file server
- Bus extension application
- Channel extender, data storage

### **Ordering Information**

PART NUMBER	INPUT/OUTPUT	MONITOR	VOLTAGE	TEMPERATURE
CL-SFP-ZX-80	AC/AC	X	3.3V	$0^{\circ}$ C to $70^{\circ}$ C
CL-SFP-ZX-80DD	AC/AC	Yes	3.3V	$0^{\circ}$ C to $70^{\circ}$ C
CL-SFP-ZX-80I	AC/AC	X	3.3V	-40°C to -85 °C

Page 1 of 9 Version 1.1 Date: 10/25/2006

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website: www.carelink.com.tw

Carelink Technology Co., Ltd



### **Absolute Maximum Ratings**

PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTE
Storage Temperature	$T_S$	-40	85	°C	
Supply Voltage	Vcc	-0.5	4.0	V	
Input Voltage	$V_{\mathit{IN}}$	-0.5	Vcc	V	
Output Current	$I_o$		50	mA	
Operating Current	$I_{OP}$		400	mA	

# **Recommended Operating Conditions**

PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTE
Case Or anotine Town anothers	T	0	70	°C	CL-SFP-ZX-80
Case Operating Temperature	$T_C$ -	-40	85	°C	CL-SFP-ZX-80I
Supply Voltage	Vcc	3.15	3.5	V	
Supply Current	$I_{TX} + I_{RX}$		250	mA	

## **Transmitter Electro-optical Characteristics**

 $Vcc = 3.1 \text{ V to } 3.5 \text{ V}, T_{\text{C}} = 0 \,^{\circ}\text{C to } 70 \,^{\circ}\text{C } (-40 \,^{\circ}\text{C to } 85 \,^{\circ}\text{C})$ 

PARAMETER	SYMBOL	MIN	TYP.	MAX	UNITS	NOTE
Output Optical Power 9/125 µm fiber	$P_{out}$	+0		+5	dBm	Average
Extinction Ratio	ER	7			dB	
Center Wavelength	$\lambda_C$	1530	1550	1570	nm	
Spectral Width (-20dB)	Δλ			1	nm	
Side Mode Suppression Ratio	SMSR	30			dB	
Rise/Fall Time, (10–90%)	$T_{r, f}$			260	ps	
Relative Intensity Noise	RIN			-120	dB/Hz	
Total Jitter	TJ			227	ps	
Output Eye			Complian	t with IEEE8	302.3z	
Max. P <sub>out</sub> TX-DISABLE Asserted	$P_{OFF}$			-45	dBm	
Differential Input Voltage	$V_{\it DIFF}$	0.4		2.0	V	

Page 2 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website: www.carelink.com.tw



# **Receiver Electro-optical Characteristics**

Vcc = 3.1 V to 3.5 V,  $T_{\rm A}$  = 0 °C to 70 °C (-40 °C to 85 °C)

PARAMETER	SYMBOL	MIN	TYP.	MAX	UNITS	NOTE
Optical Input Power-maximum	$P_{\mathit{IN}}$	0			dBm	$BER < 10^{-12}$
Optical Input Power-minimum (Sensitivity)	$P_{\mathit{IN}}$		-25	-25	dBm	BER $< 10^{-12}$
Operating Center Wavelength	$\lambda_C$	1100		1600	nm	
Optical Return Loss	ORL	12			dB	
Signal Detect-Asserted	$P_A$			-25	dBm	
Signal Detect-Deasserted	$P_D$	-36			dBm	
Differential Output Voltage	$V_{DIFF}$	0.5		1.2	V	
Data Output Rise, Fall Time (10–90%)	$T_{r,f}$			0.35	ns	
Receiver Loss of Signal Output Voltage-Low	$RX\_LOS_L$	0		0.5	V	
Receiver Loss of Signal Output Voltage-High	$RX\_LOS_H$	2.4		$V_{CC}$	V	
Receiver Loss of Signal Output Voltage-High	$RX\_LOS_H$	2.4		$V_{CC}$	V	


Page 3 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website:www.carelink.com.tw



### **Block Diagram of Transceiver**

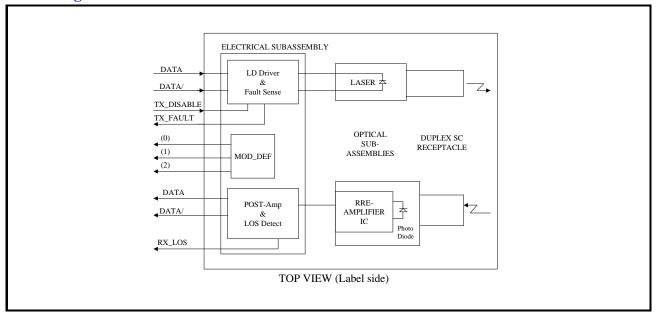

#### **Transmitter Section**

The transmitter section consists of a 1550 nm InGaAsP laser in an eye safe optical subassembly (OSA) which mates to the fiber cable. The laser OSA is driven by a LD driver IC which converts differential input LVPECL logic signals into an analog laser driving current.

### TX\_DISABLE

The TX\_DISABLE signal is high (TTL logic "1") to turn off the laser output. The laser will turn on when TX\_DISABLE is low (TTL logic "0").

### **Receiver Section**

The receiver utilizes an InGaAs PIN photodiode mounted together with a trans-impedance preamplifier IC in an OSA. This OSA is connected to a circuit providing post-amplification quantization, and optical signal detection.

Receive Loss (RX\_LOS)

The RX\_LOS is high (logic "1") when there is no incoming light from the companion transceiver. This signal is normally used by the system for the diagnostic purpose. The signal is operated in TTL level.

Page 4 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd


16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114.R.O.C

TEL: +886-2-87922019

Website:www.carelink.com.tw



### **Dimensions**

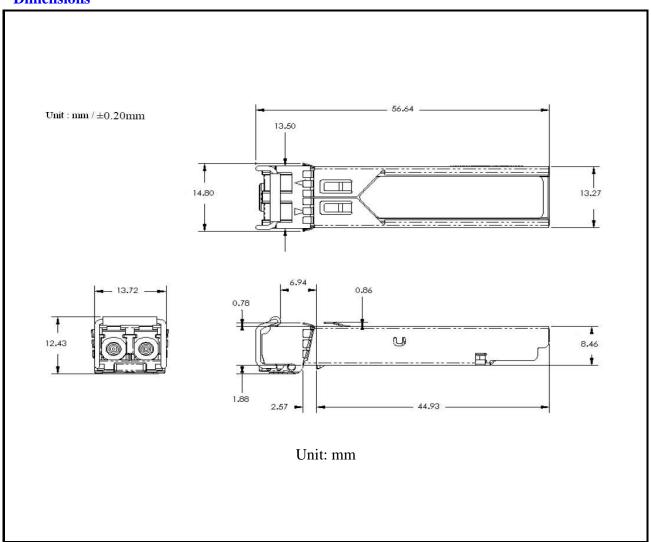


Page 5 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website:www.carelink.com.tw



### SFP host board mechanical layout

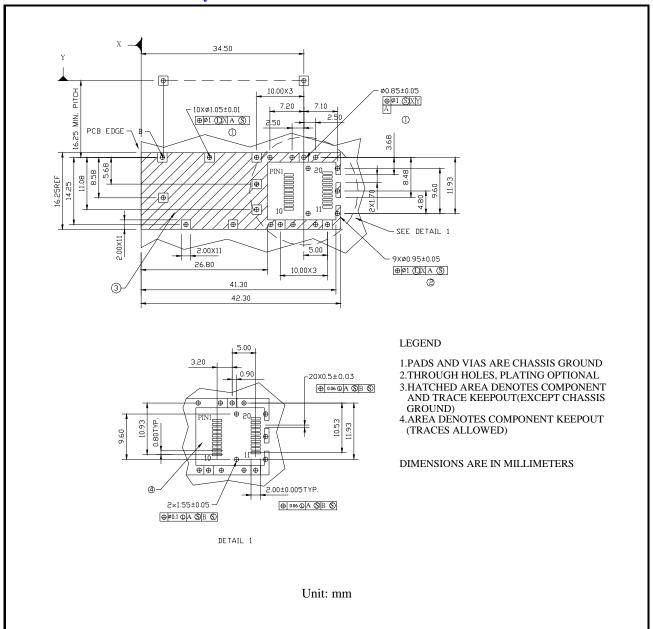


Page 6 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website: www.carelink.com.tw



## **Assembly drawing**

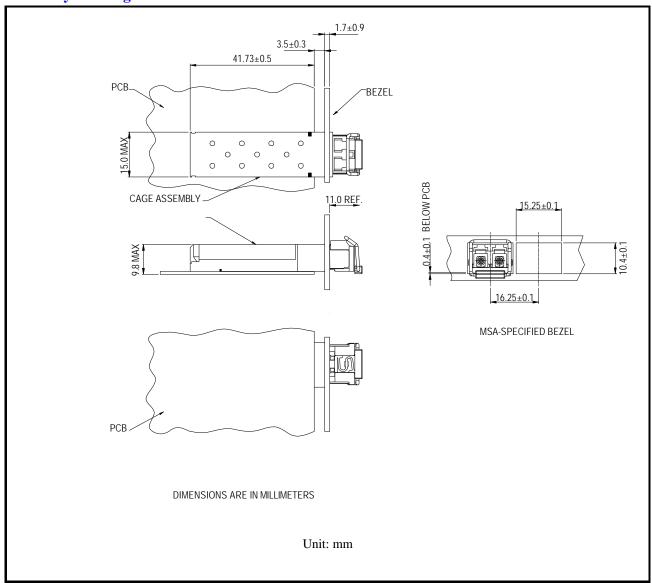


Page 7 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C TEL: +886-2-87922019

Website: www.carelink.com.tw



## **Pin Assignment**

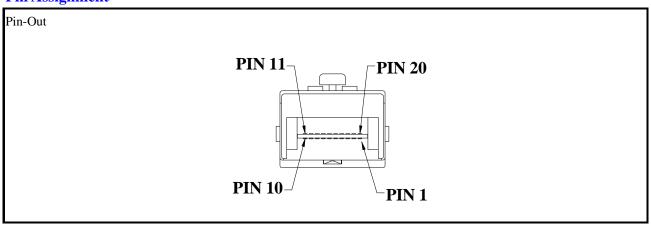

Pin	Signal Name	<b>Description</b>
1	$T_{GND}$	Transmit Ground
2	TX_FAULT	Transmit Fault
3	TX_DISABLE	Transmit Disable
4	$MOD\_DEF(2)$	SDA Serial Data Signal
5	$MOD\_DEF(1)$	SCL Serial Clock Signal
6	$MOD\_DEF\left( 0\right)$	TTL Low
7	RATE SELECT	Open Circuit
8	RX_LOS	Receiver Loss of Signal, TTL High, open collector
9	$R_{GND}$	Receiver Ground
10	$R_{GND}$	Receiver Ground
11	$R_{GND}$	Receiver Ground
12	RX-	Receive Data Bar, Differential PECL, ac coupled
13	RX+	Receive Data, Differential PECL, ac coupled
14	$R_{GND}$	Receiver Ground
15	$V_{CCR}$	Receiver Power Supply
16	$V_{CCT}$	Transmitter Power Supply
17	$T_{GND}$	Transmitter Ground
18	TX+	Transmit Data, Differential PCEL, ac coupled
19	TX-	Transmit Data Bar, Differential PCEL, ac coupled
20	$T_{GND}$	Transmitter Ground

Page 8 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website:www.carelink.com.tw



## **Eye Safety Mark**

The SFP series singlemode transceiver is a class 1 laser product. It complies with EN 60825-1 and FDA 21 CFR 1040.10 and 1040.11. In order to meet laser safety requirements the transceiver shall be operated within the Absolute Maximum Ratings.

#### Caution

All adjustments have been done at the factory before the shipment of the devices. No maintenance and user serviceable part is required. Tampering with and modifying the performance of the device will result in voided product warranty.

### Required Mark

Class 1 Laser Product Complies with 21 CFR 1040.10 and 1040.11

Note: All information contained in this document is subject to change without notice.

Page 9 of 9 Version 1.1 Date: 10/25/2006 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist, Taipei 114,R.O.C

TEL: +886-2-87922019 Website: www.carelink.com.tw