Mini Speed Dome Camera

Indoor Dome Camera

Installation Guide

Version 1.6

Preface

The information given in this manual was current when published. The company reserves the right to revise and improve its products. All specifications are subject to change without notice.

Notice

This manual provides the installation information for indoor Mini Speed Dome Cameras. To work with the Dome Cameras, any installer or technician must have the following minimum qualifications:

- A basic knowledge of CCTV systems and components
- A basic knowledge of electrical wiring and low-voltage electrical hookups
- A basic knowledge of network system setting
- Have read this manual completely

Copyright

Under copyright laws, the contents of this user manual may not be copied, photocopied, translated, reproduced or reduced to any electronic medium or machine-readable format, in whole or in part, without prior written permission of the company

Important Information

Before proceeding, please read and observe all instructions and warnings in this manual. Retain this manual with the original bill of sale for future reference and, if necessary, warranty service. When unpacking your unit, check for missing or damaged items. If any item is missing, or if damage is evident, DO NOT INSTALL OR OPERATE THIS PRODUCT. Contact your dealer for assistance.

Regulation



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste in accordance with Directive 2002/96/EC. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By proper waste handling of this product you ensure that it has no negative consequences for the environment and human health, which could otherwise be caused if this product is thrown into the garbage bin. The recycling of materials will help to conserve natural resources.

For more details information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of restricted substances are below the maximum level set by EU Directive 2002/95/EC, or are exempted due to their application.

Warnings and Cautions

Handle the camera carefully

Do not abuse the camera. Avoid striking, shaking, etc. The camera could be damaged by improper handing or storage.

Installing electricity wiring carefully

Ask qualified personnel of electrical wiring for the installation. Please note that input electricity to the unit is at tolerance of DC 12V/AC 24V \pm 10%.

The camera is capable of surge protection; ensure AC power model unit grounded appropriately against damage of heavy current or electric shock.

Do not disassemble the camera

To prevent electric shock, do not remove screws or covers. There are no user serviceable parts inside. Ask a qualified service person for servicing.

Do not block cooling holes on the bracket

This camera has a cooling fan inside. Blocking the cooling holes leads to build up of heat the camera and may cause malfunction.

• Do not operate the camera beyond the specified temperature, humidity or power source ratings

Use the indoor dome camera under conditions where temperature is between $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ ($32^{\circ}\text{F} \sim 104^{\circ}\text{F}$) and the outdoor camera under conditions where temperature is between $-30^{\circ}\text{C}\sim45^{\circ}\text{C}$ ($-22^{\circ}\text{F}\sim104^{\circ}\text{F}$), and humidity is below 90%.

Do not expose the indoor dome camera to rain or moisture, or try to operated it in wet areas

The indoor dome camera is designed for indoor use or locations where it is protected from rain and moisture. Turn the power off immediately if the camera is wet and ask a qualified service person for servicing. Moisture can damage the camera and also create the danger of electric shock.

Do not use strong or abrasive detergents when cleaning the camera body

Use a dry cloth to clean the camera when dirty. In case the dirt is hard to remove, use a mild detergent and wipe gently.

• Never face the camera towards the sun

Do not aim the camera at bright objects. Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise, the camera may be smeared or damaged.

Table of Contents

| 1. | . Introduction | | | | |
|----|-------------------------------------|----------------------------------|--|----|--|
| 2. | Standard Package Contents | | | 8 | |
| 3. | Camera Setups and Cable Connections | | | 10 | |
| | 3.1 | Dome | Camera Setups | 10 | |
| | | 3.1.1 | Switch Definition | 10 | |
| | | 3.1.2 | Communication Switch Setting | 11 | |
| | | 3.1.3 | ID Setup | 12 | |
| | | 3.1.4 | Camera Control Protocol Setup | 13 | |
| | 3.2 | Cables | s and Connections | 14 | |
| | | 3.2.1 | Cable Requirements | 14 | |
| | | 3.2.2 | 22-Pin Data Cable | 14 | |
| | | 3.2.3 | 22-Pin Connector Definition | 15 | |
| | | 3.2.4 | RS-485 Connector | 17 | |
| | | 3.2.5 | Cable Wiring and Connection | 17 | |
| | | 3.2.6 | Ethernet Cable Connection | 18 | |
| 4. | Don | Dome Camera Installation | | | |
| | 4.1 | Camer | a Dimensions | 19 | |
| | 4.2 | Option | al Accessories | 20 | |
| | 4.3 | Ceiling | Mount | 27 | |
| | | 4.3.1 | Hard Ceiling Mount | 27 | |
| | | 4.3.2 | In-Ceiling (T-Bar) Mounting | 31 | |
| | | 4.3.3 | Straight Tube | 34 | |
| | 4.4 | Wall Mount | | 37 | |
| | | 4.4.1 | Swan Tube | 37 | |
| | | 4.4.2 | Compact Pendent Mount | 38 | |
| | | 4.4.3 | Standard Pendent Mount | 40 | |
| | | 4.4.4 | Wall Box Mounting | 42 | |
| | 4.5 | Corner | Mount | 44 | |
| | | 4.5.1 | Corner Standard Mounting Plate/Corner Plate Mini | 44 | |
| | | 4.5.2 | Corner Thin/Wide Box Mounting | 46 | |
| | 4.6 | Pole Mount | | 48 | |
| | | 4.6.1 | Pole Thin/Wide Direct Mounting | 48 | |
| | | 4.6.2 | Pole Thin/Wide Box Mounting | 50 | |
| 5. | System Expansion | | | 52 | |
| | 5.1 | • | | | |
| | 5.2 | Data Formats Transforming | | | |
| | 5.3 | • | | | |
| 6. | System Integration5 | | | | |
| | 6.1 | Using Pelco Keyboard | | | |
| | 6.2 | Using Philips Allegiant Keyboard | | | |

| Appendix A: Technical Specification5 |
|--------------------------------------|
|--------------------------------------|


1. Introduction

The Mini Speed Dome Camera is a new subcompact high speed dome camera designed to deliver superb performance and durability with an intelligent and stylish housing that is suitable in any security and surveillance installation.

General Operation Requirements:

A minimum of one control device is required for operation, such as a Control Keyboard, a DVR or a PC. The Mini Dome Cameras contain a built-in receiver that decodes commands originating from a control device.

Connect Dome Cameras to other devices, as shown in the diagram, to complete a video surveillance system.

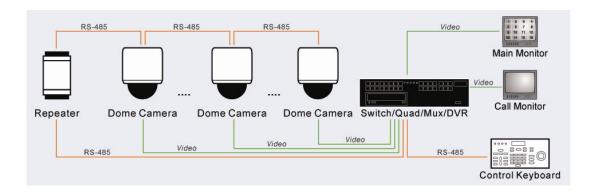


NOTE: To extend the network distance up to 1.2 km (4000 feet) and to protect the connected devices, it is highly recommended to place a repeater at the mid-point. However, a repeater may be needed in the network distance less than 1.2 km if the used cables are not the CAT 5, 24-gauge cables; see 3.3.4 RS-485 Connector Definition. Refer to the repeater's manual for detailed information.


2. Standard Package Contents

Before proceeding, please check the box contains the items listed here. If any item is missing, or if damage is evident, DO NOT install or operate the product and contact your dealer for assistance.

Analog Model

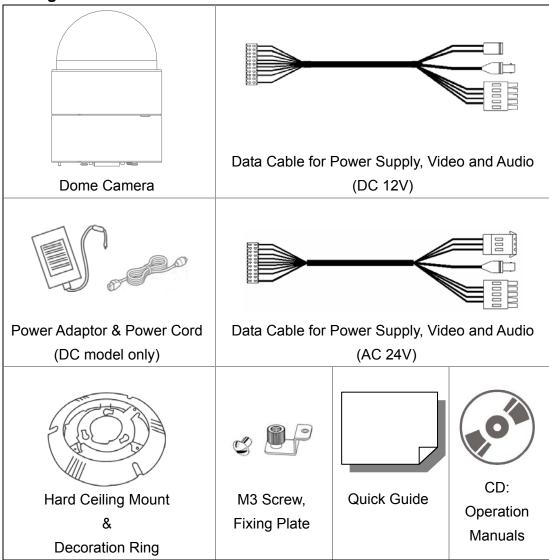

Network Model

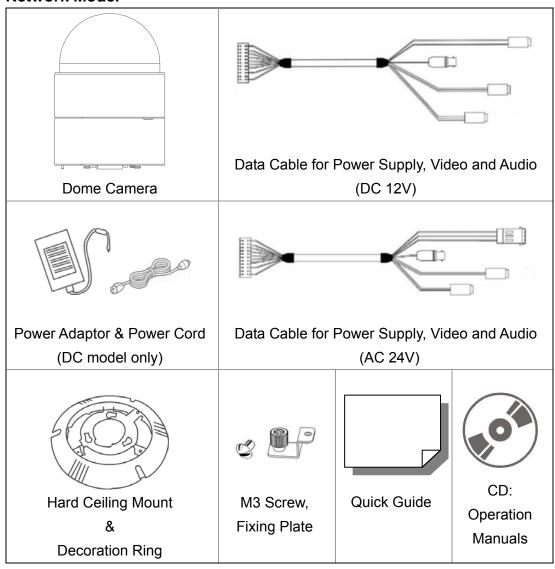

3. Camera Setups and Cable Connections


Before installing or connecting the Dome Camera, please refer to this section and complete preparation, switch setting and communication switch settings.

3.1 Dome Camera Setups


Before connecting the Dome Camera to other devices of CCTV system, please complete the Dome Camera's ID and communication switch setting. These switches are located on the bottom of the Dome Camera. Additionally, the 22-Pin Connector for Data Cable connection and ISP Connector for firmware upgrade kit connection are located on the back plate of both analog and network Speed Dome Cameras.

3.1.1 Switch Definition

Please refer to the diagrams and tables accompanied with for use of each switch/connector.

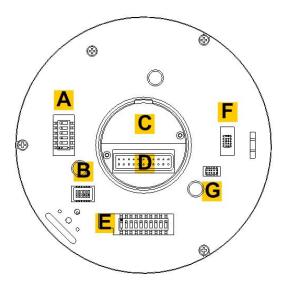

Analog Model

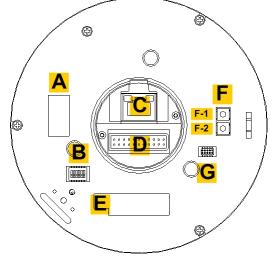

Network Model

| Α | Camera Control Protocol Switch |
|---|--------------------------------|
| В | Communication Switch |
| O | None |
| D | 22-Pin Connector |
| Е | ID Switch |
| F | Reserved |
| G | ISP Connector (for FW upgrade) |

| Α | None | | | |
|---|--------------------------------|---------------------------------|--|--|
| В | Com | Communication Switch (Reserved) | | |
| C | RJ-45 Connector | | | |
| D | 22-Pin Connector | | | |
| E | None | | | |
| F | F-1 | Reboot Button | | |
| | F-2 | Factory Reset Button | | |
| G | ISP Connector (for FW upgrade) | | | |


The ID and Protocol numbers of an analog camera are set with a 10-bit and 6-bit dip switch respectively using binary system. For switch configuration details, please refer to Appendix B: Switch Settings Index Table in Mini Speed Dome Camera's User Manual.




NOTE: Please NO NOT change the factory default Communication Switch settings of the network Speed Dome Camera.

3.1.2 Communication Switch Setting

The analog Dome Camera's communication switches are specified in the table below.

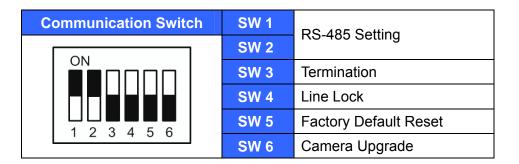


RS-485 is the interface that communicates the Dome Camera and its control device; for this reason, the RS-485 setup of the Dome Camera and the control device must be the same. The RS-485 default setting is half-duplex (see the diagram follows). Please do not change the default setting without qualified specialist or supplier's notice. As for the SW 3 and SW 4, they are used for termination and Line Lock adjustment respectively. The SW 5 is mainly used when users want to restore the camera to the factory default status; moreover, once firmware upgrade is carried out, users need to reset the SW 6 afterward.

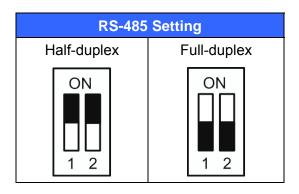

3.1.3 ID Setup

Please change the analog Dome Camera's ID if there is more than one Dome Camera in the same network. Use the switch to change your Speed Dome Camera's ID by setting the 10-bit dip switch. For instance, if the camera's ID is 006, set the SW 8 and SW 9 to "ON," with the rest to "OFF," as shown below.

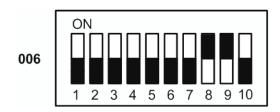

For switch configuration details, please refer to <u>Appendix B: Switch Settings</u> <u>Index Table</u> in the Dome Camera's User Manual.



NOTE: No two Dome Cameras should be given the same ID, or communication conflict may occur.


3.1.4 Camera Control Protocol Setup

Define the protocol you are going to use basing on the devices of your surveillance system. Generally, use one protocol even the devices are provided from different manufacturers. Please refer to the table below for all supported protocols with their matching switch numbers and baud rate and choose a protocol for your Speed Dome Camera.

| Switch No. | Protocol | Baud Rate |
|------------|-------------|-----------|
| 00 | VCL | 9600 |
| 01 | Pelco D | 2400 |
| 02 | Pelco P | 4800 |
| 04 | Chiper | 9600 |
| 05 | Philips | 9600 |
| 07 | DSCP | 9600 |
| 08 | AD422 | 4800 |
| 09 | DM P | 9600 |
| 11 | Pelco D | 4800 |
| 12 | Pelco D | 9600 |
| 13 | Pelco P | 2400 |
| 14 | Pelco P | 9600 |
| 15 | JVC | 9600 |
| 21 | Kalatel-485 | 9600 |
| 22 | Kalatel-422 | 4800 |
| 23 | Panasonic | 19200 |

Use the 6-bit dip switch (Camera Control Protocol Switch) to set your camera's control protocol and its baud rate.

If select protocol: Pelco D, which is of switch no. 01 and baud rate 2400, for instance, set the SW 6 to "ON," with the rest to "OFF," as shown below.

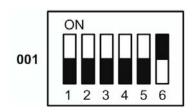

For switch configuration details, please refer to <u>Appendix B: Switch Settings</u> <u>Index Table</u> in the Dome Camera's User Manual.

3.2 Cables and Connections

The Dome Camera is supplied with one integrated 22-pin Data Cable for connecting with the power, video, and RS-485/audio input & audio output cables. Please read the following sections thoroughly before making connections.

3.2.1 Cable Requirements

For operation, the Integrated High Speed Dome Cameras require video, RS-485 and power cables as described below:

- The video cable sends video signals to a remote viewing site. Using a coaxial cable to send video signals is recommended.
- RS-485 cable carries commands from a control device to the Dome Cameras. A CAT 5, 24 gauge cable is recommended.
- Power supply: DC 12V/AC 24V output voltage




NOTE: Ensure power supply meets the Dome Camera's power requirement, or product impairment will occur. If any mistake happens, please contact with a qualified maintenance engineer.

3.2.2 22-Pin Data Cable


The analog and network Speed Dome Cameras' Data Cables are illustrated as follows.

Analog Model

DC 12V Data Cable

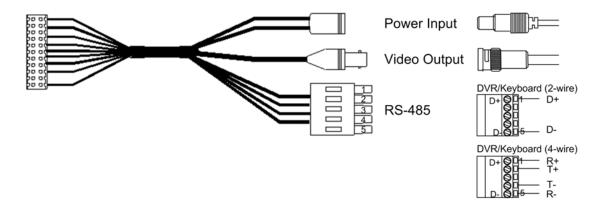

AC 24V Data Cable

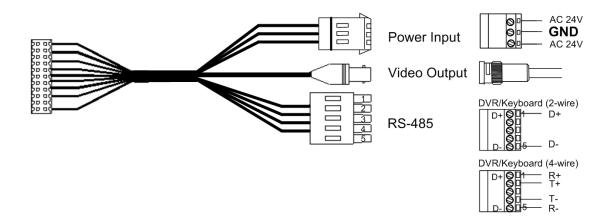




NOTE: Be careful not to pull the cables improperly during installation. Additionally, it is suggested to fasten the cables after cable connection is completed. Furthermore, when wiring the power cable, make sure the **Ground** wire inserted into the mid-pin of the terminal block.


Network Model

The network Speed Dome Camera's Data Cables are illustrated as shown below.

AC 24V Data Cable

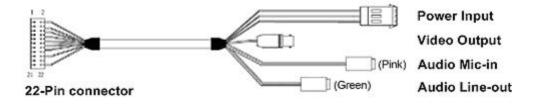

DC 12V Data Cable

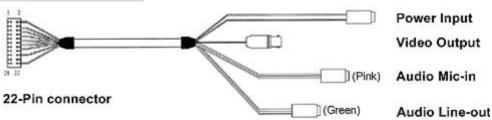

3.2.3 22-Pin Connector Definition

With the 22-pin connector, installers can simply connect the power, video and RS-485 cables to the Dome Camera at once. Particularly, the alarm pins are serviceable for connecting alarm input and output devices, such as alarm sensors, sirens or flashing lights with the surveillance system. For the definition of each pin, please refer to the tables below.



Analog Model

The analog Dome Camera's 22-pin connector definition is listed as follows:

| Pin | Definition | Cable | |
|-----|----------------|-------------|--|
| 1 | AC 24-1/DC (+) | 20AWG/18AWG | |
| 2 | ALM NC | | |
| 3 | AC 24-2/DC (-) | 20AWG/18AWG | |
| 4 | ALM NO | | |
| 5 | FG | 20AWG/18AWG | |
| 6 | ALM COM | | |
| 7 | T+ | | |
| 8 | R- | - 24AWG | |
| 9 | T- | | |
| 10 | R+ | | |
| 11 | ISOG | | |

| Pin | Definition | Cable | |
|-----|------------|--------|--|
| 12 | ALM-1 | | |
| 13 | ALM-3 | | |
| 14 | ALM-2 | | |
| 15 | ALM-4 | | |
| 16 | ALM-5 | | |
| 17 | ALM-6 | | |
| 18 | ALM-7 | | |
| 19 | ALM-8 | | |
| 20 | ALM GND | | |
| 21 | VGND | 20AWG | |
| 22 | Video | ZUAVVG | |

Network Model

The network Speed Dome Camera's 22-pin connector definition is listed below:

| Pin | Definition | Cable | |
|-----|----------------|-------------|--|
| 1 | AC 24-1/DC (+) | 20AWG/18AWG | |
| 2 | ALM NC | | |
| 3 | AC 24-2/DC (-) | 20AWG/18AWG | |
| 4 | ALM NO | | |
| 5 | FG | 20AWG/18AWG | |
| 6 | ALM COM | | |
| 7 | Audio in | | |
| 8 | Audio out | 24AWG | |
| 9 | Audio GND | | |
| 10 | Audio GND | | |
| 11 | ISOG | | |

| Pin | Definition | Cable | |
|-----|------------|-------|--|
| 12 | ALM-1 | | |
| 13 | ALM-3 | | |
| 14 | ALM-2 | | |
| 15 | ALM-4 | | |
| 16 | Reserved | | |
| 17 | Reserved | | |
| 18 | Reserved | | |
| 19 | Reserved | | |
| 20 | ALM GND | | |
| 21 | VGND | 20AWG | |
| 22 | Video | 20000 | |

3.2.4 RS-485 Connector


RS-485 is the interface that communicates the Dome Camera and its control device. Please connect the Control Keyboard to the Speed Dome Camera through the terminal block. The recommended cables for RS-485 communication are **CAT 5** cables; maximum cable length for over 24-gauge wire is 4000 feet (1219 meters). If the total cable length exceeds 4000 feet, using a repeater to maintain the signals is recommended. Please refer to the figure and table below for pin defination and wiring.




| Pin | Corresponding Pins (22-Pin Connector) | Definition |
|-----|---------------------------------------|-------------|
| 1 | 7,10 | T+, R+ (D+) |
| 2~4 | Reserved | |
| 5 | 8,9 | T-, R- (D-) |

3.2.5 Cable Wiring and Connection


Users may need to conduct cable wiring when: (1) Connecting self-provided cords to the connector housing (shown in the figure below) instead of using the equipped data cable or (2) Connecting alarm input and output devices. The table follows will illustrate the way to wire cords into the connector housing (shown in the figures below). Please refer to the section 3.2.2 22-Pin Connector Definition for the exact position of each cord.

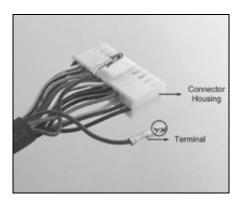

Insert the terminal into the pin holes on the connector housing, with the hook outward, as indicated in the figure.

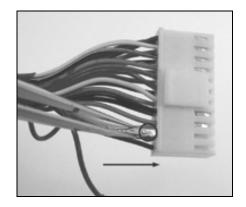


To unlock the terminal, press the hook, as indicated in the figure, with a proper tool and pull it out gently.

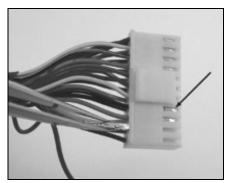

Connect the 22-pin connector to its mating port on the back plate of the Dome Camera.



NOTE: The figure on the right side is for illustration only. Please refer to section 3.1.1 Switch Definition for correct back plate layout.

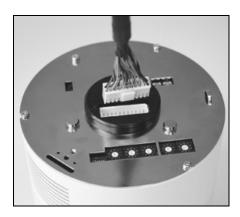

3.2.6 Ethernet Cable Connection

Connect one end of the CAT5 Ethernet cable to the RJ-45 connector of the network Speed Dome Camera, and the other end of the cable to the network switch or PC.




NOTE: In some cases, you may need use an Ethernet crossover cable when connecting the network Speed Dome Camera directly to the PC.

4. Dome Camera Installation

In the following sections, various Dome Camera installation accessories, installation methods and installation procedures will be described in detail. The next section will provide the Dome Camera's dimensions for your reference before installation.

4.1 Camera Dimensions

The indoor Dome Camera's dimensions are $\emptyset 131 \times 200 \text{ mm}$ (5.2 x 7.9 Inches) as shown in the diagram below.

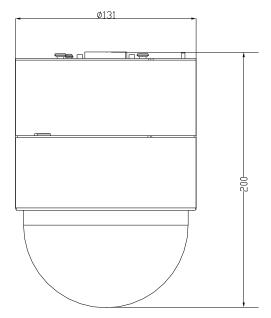

4.2 Optional Accessories

Indoor Dome Camera Accessories

Power Adapter

77H07-A1015 (Input: 100~115VAC/Output: 24VAC 36VA 77H07-A2015 (Input: 220~230VAC/Output: 24VAC 36VA)






NOTE: When wiring, make sure the Ground wire inserted into the mid-pin of the terminal block

Mounting Accessories

Indoor Mount Kit

For mounting the indoor Dome Camera onto a Standard Pendent Mount/Straight Tube. White; Diameter: 140 mm (5.5 inches); Height: 74 mm (2.9 inches); 0.3 kg (0.7 lbs)




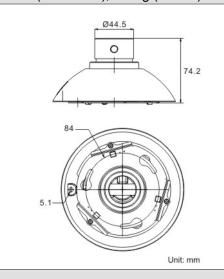

Hard Ceiling Mount


For Hard Ceiling use. Height: 19mm; Diameter of three holes: 4.5 mm; Diameter of the bracket: 158 mm; 0.2 kg (0.4 lbs)



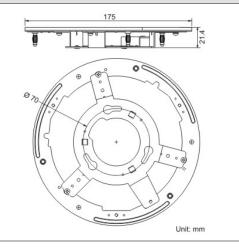


In-Ceiling (T-Bar) Mount

For in-ceiling installation use. Diameter: 179.3 mm (7.1 inches); Height: 131.4 mm (5.2 inches). Ceiling Sticker: 162 mm (6.4 inches); Supplied with M3x6 screw x2, lock bar x1and ceiling sticker x1.

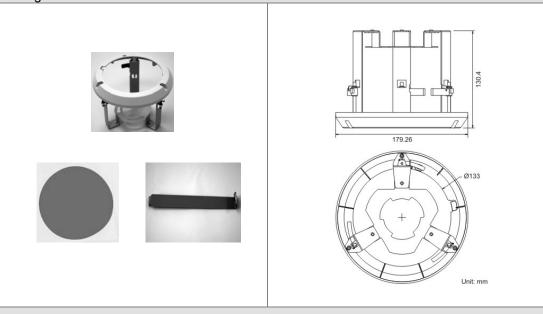


Standard Pendent Mount

White; $348\times104\times138.6$ mm ($13.7\times4.1\times5.5$ inches); 1.5 kg (3.3 lbs); Diameter: 45 mm (1.8 inches). Supplied with M8x12 screw x1, spring washer-8 x1, pendent tube washer x1, rubber washer-8 x1 and sponge x2.

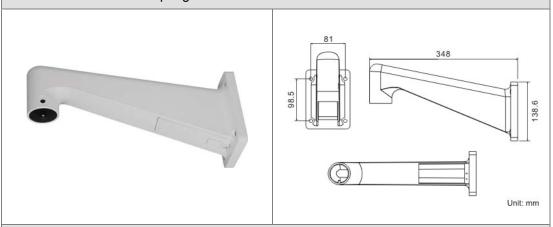


Compact Pendent Mount

White; 184×104×115.2 mm (7.24×4.09×4.54 inches); 0.6 kg (1.2 lbs). Supplied with rubber washer-8 x1, pendent tube washer x1, spring washer-8 x1 and M8x12 screw x1.

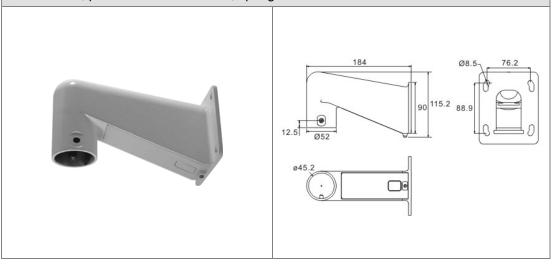

Straight Tube

White, Iron, Height: 250/500 mm (9.8/19.7 inches) ,Diameter: 50 mm (2 inches) 1 kg (2.2 lbs) / 1.8 kg (4 lbs), Supplied with M8x12 screw x1, spring washer-8 x1, pendent tube washer x1, rubber washer-8 x1 and waterproof rubber x1.

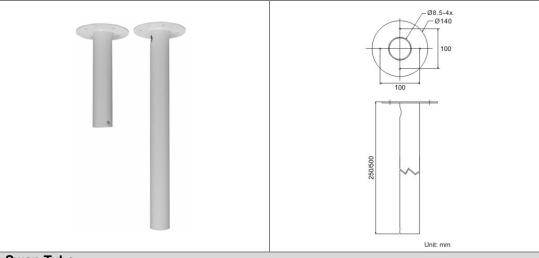


Swan Tube

For mounting with Swan Tube.

White; Iron, Dimension: 835 x 300 mm (32.9×11.8 inches); Diameter: 45 mm (1.8 inches); Weight: 3.8 kg (8.4 lbs); Supplied with pendent tube washer x1, rubber washer-8 x1, waterproof rubber x1, spring washer-8 x1 and M8x12 screw x1.



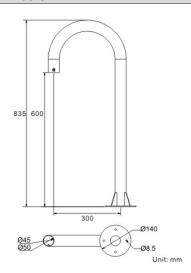


Corner Plate Mini

For mounting with Compact Pendent Mount.

White; 270(L)×166(W)×95(D) mm (8.7×8×4.6 inches); Supplied with washer-8 x4, spring washer-8 x4, M8x16 screw x4 and M8 nut x4.




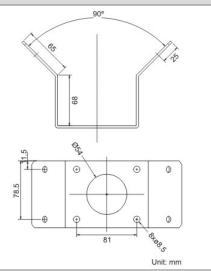

Corner Standard Mounting Plate

White, 222×204×117 mm (8.7×8×4.6 inches); 2 kg (4.4 lbs); Supplied with washer-8 x4, spring washer-8 x4, M8x16 screw x4, and M8 nut x4.




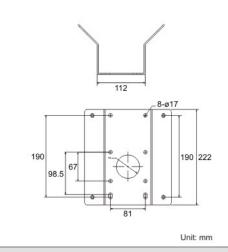

Corner Thin Box Mounting

White/Ivory, 300×164×222 mm (11.8×6.5×8.7 inches); 3 kg (6.7 lbs); Supplied with M8x16 screw x4, washer-8 x4, and spring washer-8 x4.




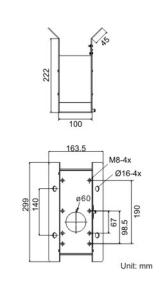

Corner Wide Box Mounting


White/Ivory; 232×234×210 mm (9.1×9.2×8.3 inches); 2.7 kg (6 lbs); Supplied with M8x16 screw x4, washer-8 x4, and spring washer-8 x4.



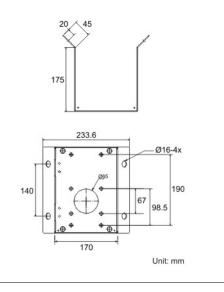


Pole Thin Box Mounting

White/Ivory; 291×136×242 mm (11.5×5.4×9.5 inches); 3.1 kg (6.9 lbs); Supplied with M8x16 screw x4, washer-8 x4, spring washer x4 and stainless steel straps x4.

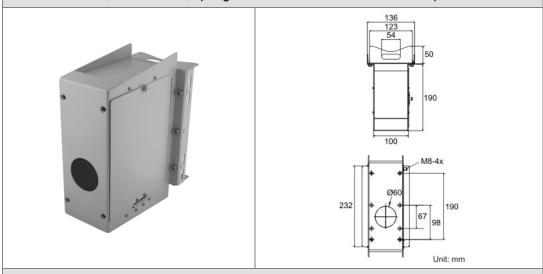

Pole Wide Box Mounting


White/Ivory, 270×166×155 mm (10.6×6.5×6.1 inches); 3.2 kg (7.1 lbs); Supplied with M8x16 screw x4, washer-8 x4, spring washer-8 x4 and stainless steel straps x4.

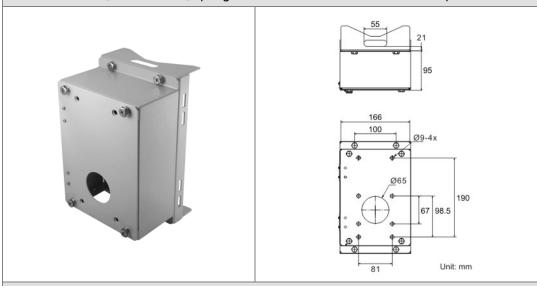

Wall Box Mounting

Ivory, $270(L)\times166(W)\times95(D)$ (10.6×6.5×3.7 inches); 2.2 kg (4.84 lbs); Supplied with M8x16 screw x4, washer-8 x4 and spring washer-8 x4




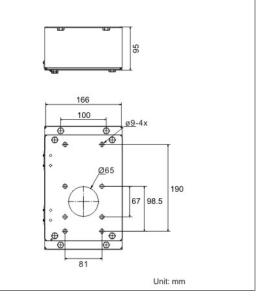

Pole Thin Direct Mounting

White/Ivory, $232\times136\times60$ mm (9.1×5.4×2.4 inches); Diameter: $112\sim140$ mm (4.4 \sim 5.5 inches); 0.7 kg (1.6 lbs); Supplied with stainless steel straps x4, M8x16 screw x4, washer x4 and spring washer-8 x4.




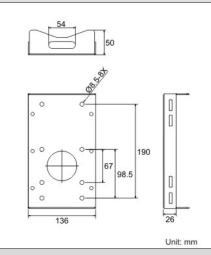

Pole Wide Direct Mounting

White/Ivory, 270×170×60 mm (10.6×6.7×2.4 inches); Diameter: 112~130 mm (4.4~5 inches); 1 kg (2.2 lbs); Supplied with M8x16 screw x4, washer x4, stainless steel straps x4, spring washer-8 x4.



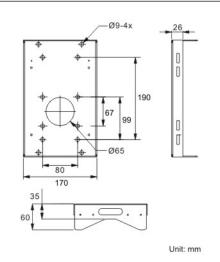

Stainless Steel Straps

For fixing Pole Direct Mounting/ Pole Box on the pole.

Length: 700 mm (27.5 inches); Width: 0.63"; 0.02 kg (0.04 lbs)




Stainless Strap Cutter

For tension, cut and crimp stainless steel straps. 1.4 kg (3.1 lbs) Suitable for straps width: 1/2", 5/8", 3/4"



Other Application Accessories

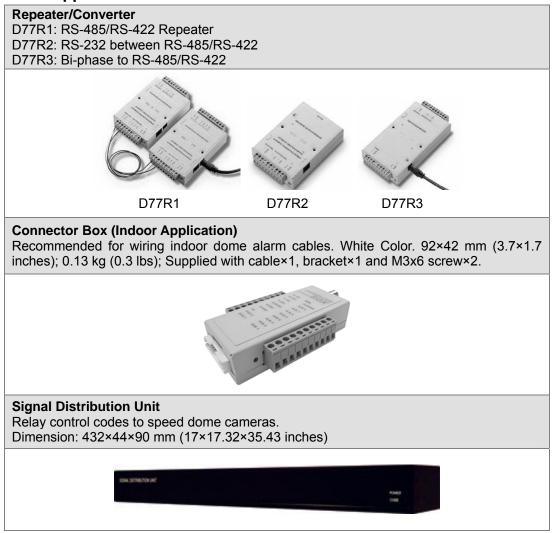

All photos of the accessories are subject to change without notice.

4.3 Ceiling Mount

The Dome Camera can be mounted to the concrete ceiling with the supplied Hard Ceiling Mount and optional accessory: Straight Tube.

4.3.1 Hard Ceiling Mount

The indoor Dome Camera can be mounted to the concrete ceiling with the supplied Hard Ceiling Mount. The items and tools needed for hard ceiling installation are listed as follows; all the supplied items are available in the Dome Camera's standard package.

Items Needed:


- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Hard Ceiling Mount with Decoration Ring (supplied)
- Fixing Plate (supplied)
- Self-tapping Screws; Plastic Screw Anchors (not supplied)

Tools Needed:

- Tool for drilling
- (+,-) Screw Drive

Follow the instructions below to install the Mini Speed Dome Camera with the Hard Ceiling Mount.

Fasten the Fixing Plate on the Dome Camera's back plate by first inserting the side with three holes into its mate slot on the camera's back plate. Push the plate inside the slot to the left, aligning the three holes on the Fixing Plate to the ones on the back plate, and then screw the Fixing Plate tightly using the supplied M3 screw.

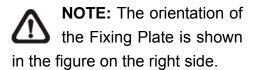





STEP 2

Remove the Decoration Ring from the Hard Ceiling Mount.




STEP 3

Place the Hard Ceiling Mount to the desired position on the ceiling, and mark the position of the three screw holes.

STEP 4

Drill these holes on the hard ceiling.

Fix the Mount with three screws.

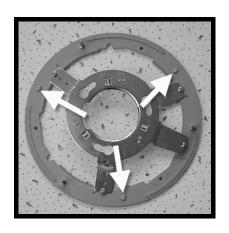

STEP 6


Remove the Optical Cover of the Dome Camera.

STEP 7

Connect the Data Cable and/or Ethernet cable through the central hole of the Mount to the Dome Camera's corresponding connector.




NOTE: If use the network Speed Dome Camera, an Ethernet cable is needed other than the Data Cable.

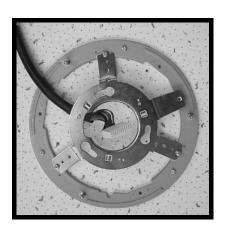

STEP 8

Attach the Dome Camera to the Mount and rotate it clockwise. Make sure that the central part of camera bottom is locked into the central hole of the Mount.

Ensure that the Fixing Plate aligns with its mating screw hole on the Mount as shown in the figure.

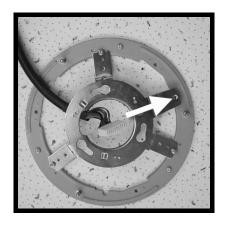

Tighten the fixing screw of the Fixing Plate as shown in the figure.



STEP10

Assemble the Decoration Ring to the Mount by pushing it up through the camera body and aligning the three pillar-like fasteners to the corresponding holes of the Decoration Ring.



STEP 11

Replace the Dome Camera's Optical Cover. The hard ceiling installation is complete.



4.3.2 In-Ceiling (T-Bar) Mounting

The indoor Dome Camera can be mounted with the optional accessory: In-Ceiling (T-Bar) Mount. The items and tools needed for in-ceiling installation are listed as follows.

Package Contents:

- Lock Bar x1
- M3x6 Screw x2
- Ceiling Sticker x1

Items Needed:

- Dome Camera
- Data Cable, M3 screws×2 (supplied)
- Ethernet Cable (network Dome Camera)
- In-Ceiling (T-Bar) Mount Kit: In-Ceiling (T-Bar) Mount; Lock Bar; Ceiling Sticker (optional accessory)

Tools Needed:


- Tool for drilling
- (+,-) Screw Drive

Follow the instructions below to install the Mini Speed Dome Camera with the In-Ceiling (T-Bar) Mount.


STEP 1

Screw the Lock Bar to the mating screw hole on the edge of the camera's base plate with the supplied M3 screw as shown in the figures.



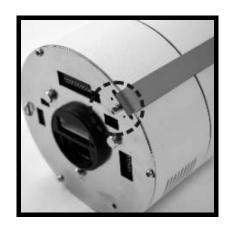


Place the supplied Ceiling Sticker onto the ceiling, and cut the circle part (Diameter: 162 mm) out of the ceiling.

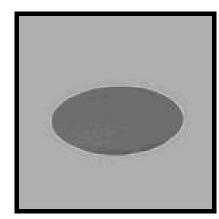


STEP 3

Hold up the In-Ceiling (T-Bar) Mount and put it into the opening.

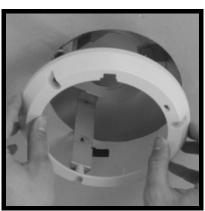

STEP 4

Tighten the three fixing screws on the In-Ceiling (T-Bar) Mount as shown in the figure.

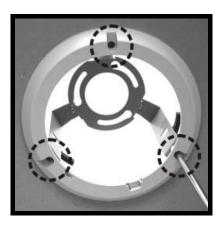



Figure

Top view of fixed In-Ceiling (T-Bar) Mount.




When screwing the In-Ceiling (T-Bar) Mount's wing will keep approaching to the ceiling board until it is completely flush with the board.

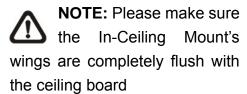

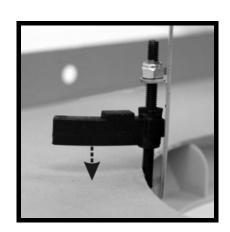

STEP 6

Run the Data Cable through the center hole of the In-Ceiling Mount. Then Connect the cable to the mating 22-pin port on the Dome Camera's base plate.

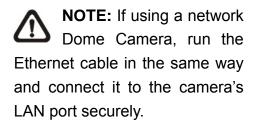



Mount the Dome Camera onto the In-Ceiling Mount with the exact orientation as indicated. Firstly, align the fixing screw hole on the Lock Bar with the mating slot on the ring of the In-Ceiling Mount. Then rotate the camera clockwise, and let the screw hole on the Lock Bar align with the fixing screw hole on the In-Ceiling Mount's ring.





STEP 8

Screw the Dome Camera onto the In-Ceiling Mount with the supplied M3 screw. Installation is finished.



4.3.3 Straight Tube

The Straight Tube is available in different length: 25 cm and 30 cm.

Package Contents:

- M8x12 Screw x1
- Spring Washer-8 x1
- Pendent Tube Washer x1
- Rubber Washer-8 x1
- Waterproof Rubber x1

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Straight Tube and equipped items (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Screws and Screw Anchors for fixing the Straight Tube onto the ceiling (not supplied)

Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps to mount the Dome Camera with the Straight Tube.


- Ensure that the ceiling can support the weight of the Dome Camera and Straight Tube.
- 2) Make a cable entry hole on the ceiling.
- 3) Fix the Straight Tube to the ceiling with proper screws and screw anchors.
- 4) Attach the Waterproof Rubber to the Straight Tube.
- 5) Run the cable(s) through the Straight Tube with the Data Cable's 22-pin cable coming out of the outlet.



NOTE: After running the cable(s) through the Straight Tube, please block the Tube's outlet with the supplied sponge to avoid insects entering the tube.

- 6) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Straight Tube with the supplied screws and washers. Then adjust the Waterproof Rubber to the joint.
- 7) Connect the cable(s) to the Dome Camera.
- 8) Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Ceiling Mount: Straight Tube + Indoor Mount Kit

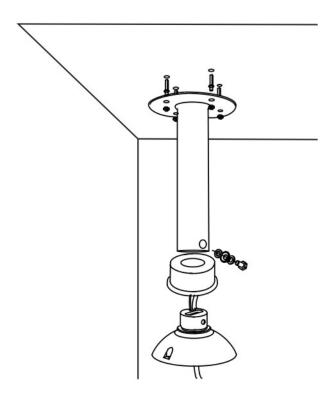

4.4 Wall Mount

The Dome Camera can be mounted on the wall with Compact Pendent Mount, Standard Pendent Mount and Wall Box. Please follow the installation instructions below for mounting the Dome Camera via different ways.

4.4.1 Swan Tube

Package Contents:

- M8x12 Screw x1
- Spring Washer-8 x1
- Pendent Tube Washer x1
- Rubber Washer-8 x1
- Waterproof Rubber x1

Items Needed:

- Dome Camera
- Swan Tube and other equipped items (optional accessory)
- Waterproof Rubber (standard accessory)
- Screws and Screw Anchors for fixing the Swan Tube on the floor (not supplied).


Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps to mount the dome with the Swan Tube.

- 1) Fix the Swan Tube on the floor with proper screws and screw anchors (not supplied).
- 2) Thread the cables through the Swan Tube and the Indoor Mounting Kit.
- 3) Fix the Indoor Mounting Kit to the Swan Tube with the supplied screws and washers. Then adjust the waterproof rubber to the junction of Swan Tube and Indoor Mounting Kit.
- **4)** Connect the cables to the dome camera. Then attach the dome to the Indoor Mounting Kit and fix them with the supplied screw.

Wall Mount: Swan Tube + Indoor Mounting Kit

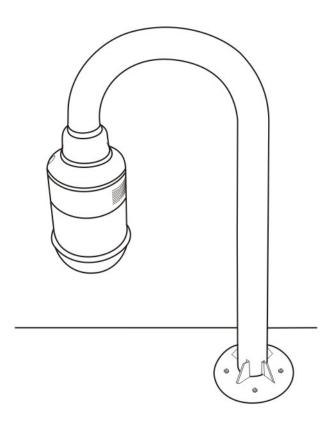

4.4.2 Compact Pendent Mount

Package Contents:

- Rubber Washer-8 x1
- Pendent Tube Washer x1
- Spring Washer-8 x1
- M8x12 Screw x1

Items Needed:


- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Compact Pendent Mount and equipped items (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Screws and Screw Anchors for fixing the Compact Pendent Mount (not supplied)

Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps below to mount the Dome Camera with the Compact Pendent Mount.


1) Make a cable entry hole on the wall to recess the cables. Otherwise, users could push up the Cable Entry Board on the Compact Pendent Mount's Mounting Plate to place the cables, as shown in the photo below.

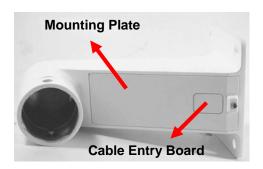


- 2) Fix the Compact Pendent Mount on the wall with proper screws and screw anchors.
- 3) Attach the Waterproof Rubber to the Compact Pendent Mount.
- **4)** Run the cable(s) through the Compact Pendent Mount with the Data Cable's 22-pin cable coming out of the outlet.




NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. The sponge can be placed in two ways as shown in the illustrations below.

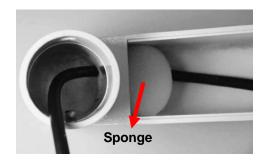

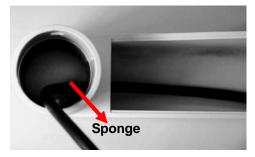

- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Compact Pendent Mount with the supplied screws and washers. Then adjust the Waterproof Rubber to the joint.
- **6)** Connect the cable(s) to the Dome Camera.
- 7) Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Wall Mounting: Compact Pendent Mount + Indoor Mount Kit

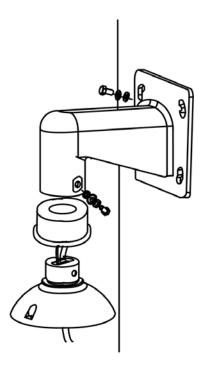

4.4.3 Standard Pendent Mount

Package Contents:

- M8x12 Screw x1
- Spring Washer-8 x1
- Pendent Tube Washer x1
- Rubber Washer-8 x1
- Sponge x2

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Standard Pendent Mount and equipped items (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Screws and Screw Anchors for fixing the Standard Pendent Mount onto the ceiling (not supplied)

Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps below to mount the Dome Camera with the Standard Pendent Mount.


- 1) Make a cable entry hole on the wall to recess the cables. Otherwise, users could push up the cable entry board on the Standard Pendent Mount's mounting plate to place the cables (see the illustration in section <u>4.4.2</u> <u>Compact Pendent Mount</u> > Step 1).
- 2) Fix the Standard Pendent Mount on the wall with proper screws and screw anchors.
- 3) Attach the Waterproof Rubber to the Standard Pendent Mount.
- **4)** Run the cable(s) through the Standard Pendent Mount with the Data Cable's 22-pin cable coming out of the outlet.



NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. See the illustrations in section <u>4.4.2 Compact Pendent Mount</u> > Step 4.

- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Standard Pendent Mount with the supplied screws and washers. Then adjust the Waterproof Rubber to the joint.
- 6) Connect the cable(s) to the Dome Camera.
- 7) Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Wall Mounting: Standard Pendent Mount + Indoor Mount Kit

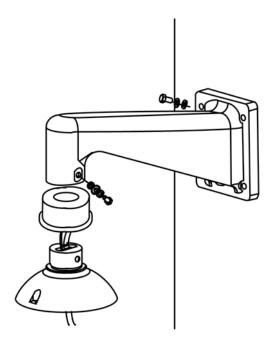

4.4.4 Wall Box Mounting

Package Contents:

- M8x16 Screw x4
- Washer-8 x4
- Spring Washer-8 x4

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Standard/ Compact Pendent Mount and equipped items (optional accessory)
- Wall Box Mounting (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Screws and Screw Anchors for fixing the Wall Box Mounting onto the ceiling (not supplied)

Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps to mount the Dome Camera with the Standard/ Compact Pendent Mount and Wall Box Mounting.

- 1) Make a cable entry hole on the wall to recess the cable(s).
- 2) Fix the Wall Box Mounting on the wall with proper screws and screw anchors. Then run the cable(s) through the hole on the Wall Box Mounting with the Data Cable's 22-pin cable coming out.
- 3) Fasten the Standard/ Compact Pendent Mount onto the Wall Box Mounting with the supplied screws and washers. Then thread the cable(s) through the Standard/ Compact Pendent Mount with the cable(s) coming out of the Pendent Mount's outlet.




NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. See the illustrations in section <u>4.4.2 Compact Pendent Mount</u> > Step 4.

4) Attach the Waterproof Rubber to the Standard/ Compact Pendent Mount.

- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Standard/ Compact Pendent Mount with the supplied screws and washers. Then adjust the Waterproof Rubber to the joint.
- 6) Connect the cable(s) to the Dome Camera.
- 7) Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Wall Box Mounting: Wall Box Mounting + Standard/ Compact Pendent Mount + Indoor Mount Kit

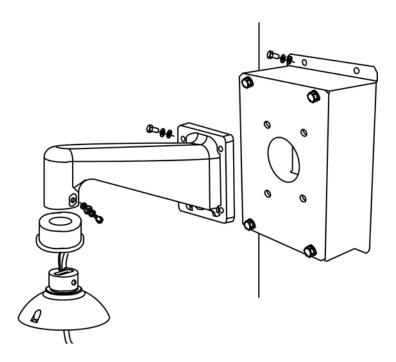

4.5 Corner Mount

4.5.1 Corner Standard Mounting Plate/Corner Plate Mini

Package Contents:

- Washer-8 x4
- Spring Washer-8 x4
- M8x16 Screw x4
- M8 Nut x4

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Standard/ Compact Pendent Mount and equipped items (optional accessory)
- Corner Standard Mounting Plate/Corner Plate Mini (herein collectively called "Corner Mounting Plate"; optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Screws and Screw Anchors for fixing the Corner Mounting Plate (not supplied)

Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps below to mount the Dome Camera with the Corner Mounting Plate and Standard/ Compact Pendent Mount.


- 1) Make a cable entry hole on the wall to recess the cable(s).
- 2) Fix the Corner Mounting Plate on the corner of the wall with proper screws and screw anchors. Then run the cable(s) through the hole on the Corner Mounting Plate with the Data Cable's 22-pin cable coming out.
- 3) Fasten the Standard/ Compact Pendent Mount onto the Corner Mounting Plate with the supplied screws and washers. Then thread the cable(s) through the Standard/ Compact Pendent Mount with the cable(s) coming out of the Pendent Mount's outlet.



NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. See the illustrations in section <u>4.4.2 Compact Pendent Mount</u> > Step 4.

- 4) Attach the Waterproof Rubber to the Standard/ Compact Pendent Mount.
- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Standard/ Compact Pendent Mount with the supplied screws and washers. Then adjust the Waterproof Rubber to the joint.
- 6) Connect the cable(s) to the Dome Camera.
- 7) Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Corner Wall Mounting: Corner Standard/Mini Mounting Plate + Standard/
Compact Pendent Mount + Indoor Mount Kit

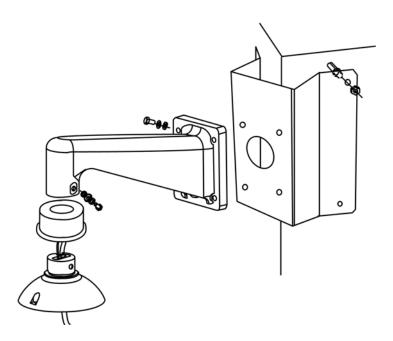

4.5.2 Corner Thin/Wide Box Mounting

Package Contents:

- M8x16 Screw x4
- Washer-8 x4
- Spring Washer-8 x4

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Standard/ Compact Pendent Mount and equipped items (optional accessory)
- Corner Thin/Wide Box (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Screws and Screw Anchors for fixing the Corner Thin/Wide Box (not supplied)

Tools Needed:

- Tool for drilling
- Tool for screwing

Follow the steps below to mount the Dome Camera with the Corner Thin/Wide Box and Standard/ Compact Pendent Mount.

- 1) Make a cable entry hole on the wall to recess the cable(s).
- 2) Fix the Corner Thin/Wide Box on the corner of the wall with proper screws and screw anchors. Then run the cable(s) through the hole on the Corner Mounting Plate with the Data Cable's 22-pin cable coming out.
- 3) Fasten the Standard/ Compact Pendent Mount onto the Corner Thin/Wide Box with the supplied screws and washers. Then thread the cable(s) through the Standard/ Compact Pendent Mount with the cable(s) coming out of the Pendent Mount's outlet.




NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. See the illustrations in section 4.4.2 Compact Pendent Mount > Step 4.

- 4) Attach the Waterproof Rubber to the Standard/ Compact Pendent Mount.
- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Standard/ Compact Pendent Mount with the supplied

screws and washers. Then adjust the Waterproof Rubber to the joint.

- **6)** Connect the cable(s) to the Dome Camera.
- **7)** Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Corner Box Mounting: Corner Thin/Wide Box + Standard/ Compact Pendent Mount + Indoor Mount Kit

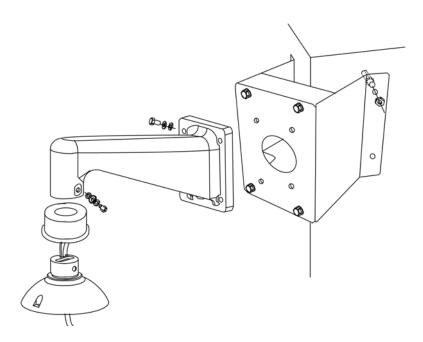

4.6 Pole Mount

4.6.1 Pole Thin/Wide Direct Mounting

Package Contents:

- Stainless Steel Straps x4
- M8x16 Screw x4
- Washer x4
- Spring Washer-8 x4

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Standard/ Compact Pendent Mount and equipped items (optional accessory)
- Pole Thin/Wide Direct Mounting (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Stainless Steel Straps for fixing the Pole Thin/Wide Direct Mounting (optional accessory)

Tools Needed:

- Stainless Strap Cutter
- Tool for screwing

Follow the steps below to mount the Dome Camera with the Pole Thin/Wide Direct Mounting and Standard/ Compact Pendent Mount.


- Fasten the Pole Thin/Wide Direct Mounting on a pole with equipped stainless straps.
- 2) Run the cable(s) through the hole on the Pole Thin/Wide Direct Mounting with the Data Cable's 22-pin cable coming out.
- 3) Fasten the Standard/ Compact Pendent Mount onto the Pole Thin/Wide Direct Mounting with the supplied screws and washers. Then thread the cable(s) through the Standard/ Compact Pendent Mount with the cable(s) coming out of the Pendent Mount's outlet.



NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. See the illustrations in section <u>4.4.2 Compact Pendent Mount</u> > Step 4.

- 4) Attach the Waterproof Rubber to the Standard/ Compact Pendent Mount.
- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Standard/ Compact Pendent Mount with the supplied screws and washers. Then adjust the Waterproof Rubber to the joint.
- 6) Connect the cable(s) to the Dome Camera.
- 7) Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Pole Direct Mounting: Pole Thin/Wide Direct Mounting + Standard/ Compact Pendent Mount + Indoor Mount Kit

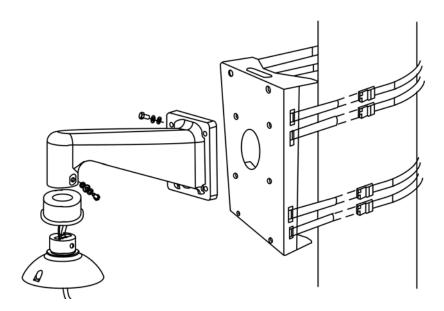

4.6.2 Pole Thin/Wide Box Mounting

Package Contents:

- M8x16 Screw x4
- Washer-8 x4
- Spring Washer x4,
- Stainless Steel Straps x4

Items Needed:

- Dome Camera
- Data Cable (supplied)
- Ethernet Cable (network Dome Camera)
- Standard/ Compact Pendent Mount and equipped items (optional accessory)
- Pole Thin/Wide Box Mounting (optional accessory)
- Indoor Mount Kit (optional accessory)
- Waterproof Rubber (Indoor Mount Kit's accessory)
- Stainless Steel Straps for fixing the Pole Thin/Wide Box Mounting (optional accessory)

Tools Needed:

- Stainless Strap Cutter
- Tool for screwing

Follow the steps below to mount the Dome Camera with the Pole Thin/Wide Box and Standard/ Compact Pendent Mount.

- 1) Fasten the Pole Thin/Wide Box on a pole with equipped stainless straps.
- 2) Run the cable(s) through the hole on the Pole Thin/Wide Box Mounting with the Data Cable's 22-pin cable coming out.
- 3) Fasten the Standard/ Compact Pendent Mount onto the Pole Thin/Wide Box Mounting with the supplied screws and washers. Then thread the cable(s) through the Standard/ Compact Pendent Mount with the cable(s) coming out of the Pendent Mount's outlet.




NOTE: Please block the cable entry hole with the supplied sponge to avoid insects entering the Pendent Mount. See the illustrations in section 4.4.2 Compact Pendent Mount > Step 4.

- 4) Attach the Waterproof Rubber to the Standard/ Compact Pendent Mount.
- 5) Thread the cable(s) through the Indoor Mount Kit and join the Indoor Mount Kit to the Standard/ Compact Pendent Mount with the supplied

screws and washers. Then adjust the Waterproof Rubber to the joint.

- **6)** Connect the cable(s) to the Dome Camera.
- **7)** Join the Dome Camera to the Indoor Mount Kit with the supplied screw and washers.

Pole Box Mounting: Pole Thin/Wide Box + Standard/Compact Pendent Mount + Indoor Mount Kit

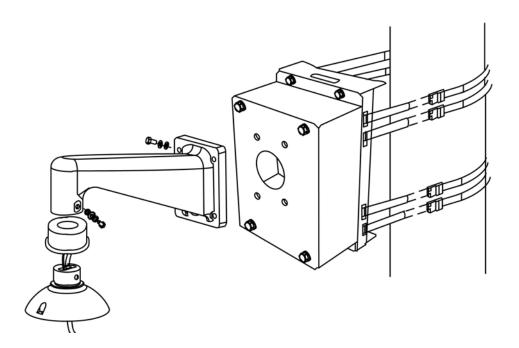

5. System Expansion


5.1 Connecting with Connector Box

Ideally being used in indoor installation circumstances, a Connector Box provides easy wiring and well organized connection between alarms, cameras and other devices, for easy installation.

To connect the connector box with other devices:

- Use a RS-485 cable (CAT 5 is recommended) to complete RS-485 communication wiring with control devices such as DVRs and Control Keyboards.
- Use a 22-pin cable to connect the connector box to the dome.


For more detailed information, please refer to the connector box user's manual. A system wired with a connector box is illustrated in the following diagram.

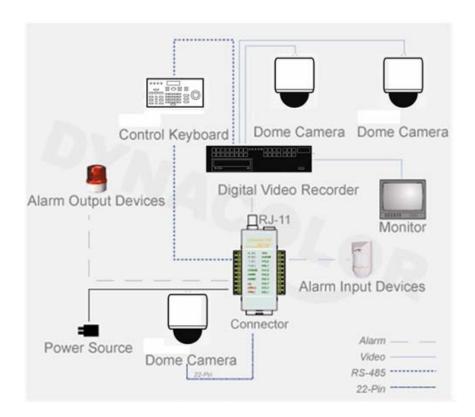

5.2 Data Formats Transforming

To integrate other surveillance devices with the Speed Dome Cameras, we provide three kinds of converter/repeater to transform the communication formats between devices. If a converter/repeater is used, the total network distance of the surveillance system can be extended, and the connected devices will also be protected. Up to 10 devices are allowed to connect to each repeater. For more detailed information, please refer to the converter/repeater user's manual.




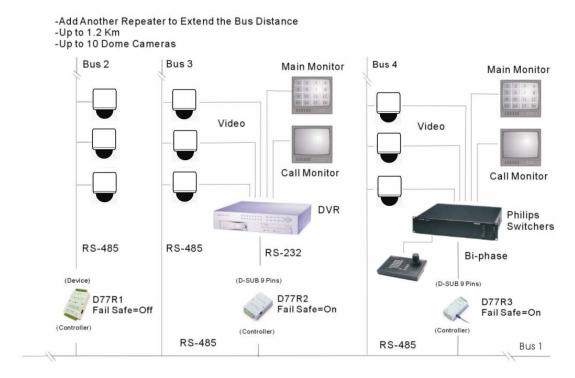


5.3 Signal Distribution Unit

The RS-485 Signal Distribution Unit (SDU) is designed to relay control codes to Speed Dome Cameras. It is capable of communicating with cameras up to 1.0 kilometers away. Additionally, the SDU can be installed in either "star" or "daisy chain" configuration with up to 160 cameras (see the diagrams below). Its versatile installation configuration makes an easy integration into expanding surveillance systems. For more information, please refer to the SDU user's manual.

Star Configuration

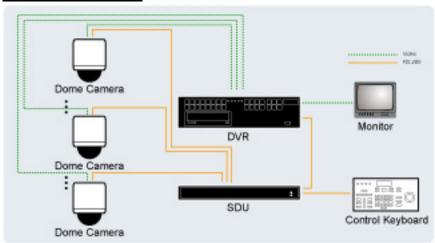

Daisy Chain Configuration

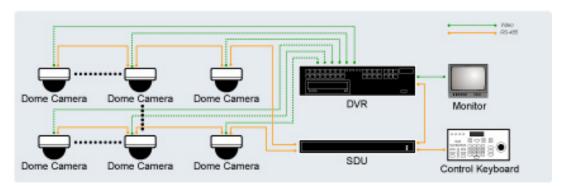

6. System Integration


The Dome Camera is allowed to be integrated into other suppliers' surveillance systems with large set of built-in protocols. Refer to the following sections for more information.

6.1 Using Pelco Keyboard


The Speed Dome Camera can be controlled through a Pelco keyboard which built in with D protocol and P protocol. Please follow the instruction to manipulate our speed dome by a keyboard with D and P protocols.

| Function | Instruction | |
|-----------------|--|--|
| Set Preset | Number key + press and hold <preset> button for three</preset> | |
| | seonds. | |
| Go Preset | Number key + <preset> to command a dome camera to go to a</preset> | |
| | specific preset position. | |
| Display or hide | 7 7 <preset></preset> | |
| an OSD menu | | |
| Move the cursor | Move the cursor up/down/right/left by pushing the joystick | |
| in OSD menu | up/down/right/left respectively | |
| <enter></enter> | 7 7 <preset></preset> | |
| Reset the dome | 7 8 <preset></preset> | |
| camera | | |

Cable Definition (P Protocol Keyboard to PTZ Camera)

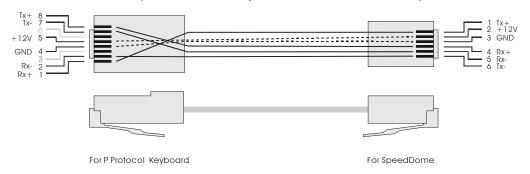

Cable Definition (D Protocol Keyboard to PTZ Camera)

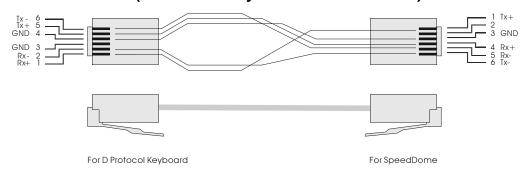

6.2 Using Philips Allegiant Keyboard

The Dome Cameras can be integrated into Philips Allegiant systems through D77R3 repeaters. Please follow the instructions to control Dome Cameras through Philips Allegiant systems.

Symbol Definition

| <shot></shot> | Command dome cameras to go to a specific preset position. |
|---------------|---|
| <set></set> | Set preset position. |

Special Function

| 7 6 <set></set> | Exit the OSD menu directly. | |
|-----------------------|--|--|
| | 1. Display or hide the OSD menu. | |
| 7 7 <set></set> | 2. A virtual key to issue an ENTER command when the OSD is | |
| | displayed. | |
| 7 8 <set></set> | Reset the doma camera. | |
| <iris open=""></iris> | Send an ENTER command when the OSD is displayed. | |

Control Dome Camera Using Allegiant Keyboard

- Users can move the cursor left/right/up/down through pushing the joystick left /right/up/down.
- Users cannot issue the ENTER command directly. To enable the function, press " 7 7 <Set> ".

Appendix A: Technical Specification

| Item | | Mini Speed Dome Camera |
|-------------------------|--------|--|
| CAMERA | | |
| CCD Sensor | | Sony CCD |
| Optical Zoom | | 12x |
| Digital Zoom | | 1× ~ 12× variable |
| Effective Pixels | NTSC | 380k/480k |
| | PAL | 440k/570k |
| Horizontal Resolution | | 540 TVL/ 650 TVL |
| Scanning System | | NTSC / PAL |
| Synchronization | | Internal / Line Lock |
| Video Output | | 1.0 Vp-p / 75 Ω, BNC |
| Minimum Illuminatio | n | 0.1 lux; 0.01 lux (B/W) |
| Focal Length | | 3.8 ~ 45.6 mm |
| Focus Mode | | Auto / Manual |
| White Balance | | Auto / Manual / Indoor / Outdoor |
| Iris Control | | Auto / Manual |
| Electronic Shutter | | 1/1 ~ 1/10k sec. |
| AGC control | | Auto / Manual |
| Back Light Compens | sation | On / Off |
| OPERATION | | |
| Built-in Protocol | | DynaColor, Pelco D&P, VCL, Philips, AD-422, JVC, etc. |
| Multi-Language OSD | | English, French, German, Italian, Portuguese, Spanish |
| Pan Travel | | 360° endless |
| Tilt Travel | | -10° ~ 190° |
| Manual Speed | | 1° ~ 80°/s |
| Presets | | 256 |
| Preset Accuracy | | 0.225° |
| Preset Speed | | 10° ~ 400°/s |
| Sequence | | 8 |
| Auto Pan | | 4 |
| Cruise | | 8 |
| Privacy Mask | | 16 |
| Proportional Pan & Tilt | | On/Off (Pan and tilt speed proportional to zoom ratio) |
| Resume after Power loss | | Yes |
| Zone Title | | 16 |
| Home Function | | Preset, Sequence, Auto pan, Cruise |
| | | |
| Auto Flip | | Digital / Mechanical / Off |

| Item | | Mini Speed Dome Camera |
|--------------------------|----|------------------------------------|
| Wide Dynamic Range | | On / Off |
| Day/Night: IR Cut Filter | | On / Off |
| Image Freeze | | On / Off |
| Image Inverse | | On / Off |
| Noise Reduction | 2D | On / Off |
| Noise Reduction | 3D | On / Off |
| Alarm Input | | 8 |
| Alarm Output | | 1 |
| Alarm Reaction | | Preset, Sequence, Auto pan, Cruise |
| GENERAL | | |
| Environment | | Indoor |
| Controller Interface | | RS-485 |
| Operating Temperature | | 0°C ~ 40°C (32°F ~ 104°F) |
| Dimension | | ∞131 x 200 mm (5.2 x 7.9 Inches) |
| Weight | | 1.2 kg (2.6 lbs) |
| Power Source | | DC12V / AC24V ± 10% |
| Power Consumption | | 14 W |
| Regulatory | | CE, FCC, RoHS |

^{**}All Specifications are subject to change without notice.